

TECHNICAL MANUAL

KT- PRO545 – V1





CONTENTS

| CONTENTS | Page | 1 |
|--------------------------|------|----|
| HOW TO TAKE A SCREENSHOT | Page | 2 |
| CONNECT DEVICE TO WIFI | Page | 3 |
| SCANNER SETTINGS | Page | 4 |
| STORAGE SETTINGS | Page | 5 |
| NFC SETTINGS | Page | 6 |
| DATE AND TIME SETTINGS | Page | 7 |
| HOW TO CHANGE LANGUAGE | Page | 8 |
| нотѕрот | Page | 9 |
| PRINTER SETTINGS | Page | 10 |
| FIRMWARE UPDATES | Page | 11 |
| SOUND SETTINGS | Page | 12 |
| ACCOUNT SETTINGS | Page | 13 |
| BLUETOOTH SETTINGS | Page | 14 |
| HOW TO UNINSTALL APPS | Page | 15 |
| DISPLAY SIZE | Page | 16 |
| FONT SIZE | Page | 17 |
| MOBILE NETWORKS | Page | 18 |
| SIM CARDS | Page | 19 |
| RESET OPTIONS | Page | 20 |
| BATTERY USAGE | Page | 21 |
| VIEW FILES ON SD CARD | Page | 22 |
| PRINTING FROM THE WEB | Page | 23 |
| HOW TO SET UP AN EMAIL | Page | 24 |
| | | |



HOW TO TAKE A SCREENSHOT



- PRESS AND HOLD POWER BUTTON
 FOR 3 SECONDS
- MENU WILL APPEAR WITH 3
 OPTIONS
- SELECT SCREENSHOT



CONNECT DEVICE TO WIFI





SCANNER SETTINGS

| I:08 PM 🎆 | * • - | |
|--|-------|----------------------------------|
| Scan Setting | | IN APPS |
| INVERSE CODE SUPPORT | | GO TO BARCODE UTILI ⁻ |
| Inverse Code Enable | | |
| MAX SCAN TIME / DATA RECEIVE METHOD | | SELECT SCAN SETTINGS |
| Max scan time 2 secs | | |
| Data Receive Method BROADCAST_EVENT | | |
| Scan mode Single shot | | |
| View size 4/4 | | |
| SCANKEY ENABLE | | |
| Left ScanKey | | |
| Right ScanKey | | |
| NOTIFICATION | | |
| | | |



STORAGE SETTINGS





NFC SETTINGS





DATE AND TIME SETTING





HOW TO CHANGE LANGUAGE







HOTSPOT





PRINTER SETTINGS





HOW TO CHECK FOR FIRMWARE UPDATES





- SELECT SYSTEMS
- SELECT ADVANCED
- SELECT ABOUT PHONE
- SELECT SYSTEM UPGRADE
- CHECK UPDATES AVAILABLE

PLEASE CHECK FOR UPDATES ON ALL NEW UNITS BEFORE USING DEVICE



SOUND SETTINGS



- GO TO SETTINGS
- SOUND SETTINGS
- SELECT PREFFERED VOLUME



ACCOUNT SETTINGS



BLUETOOTH SETTING



- GO TO SETTINGS
- SELECT CONNECTED
 DEVICE
- CLICK ON CONNECTION
 PREFFERENCE
- SELECT BLUETOOTH
- SELECT/PAIR NEW DEVICE



HOW TO UNINSTALL APPS





DISPLAY SIZE





FONT SIZE



• GO TO SETTINGS

SELECT DISPLAY

SELECT ADVANCED

SELECT FONT SIZE

 SELECT FONT SIZE USING DEFAULT SLIDE FROM LEFT TO DECREASE AND RIGHT TO INCREASE



MOBILE NETWORKS





SIM CARDS

| 10:45 A | M G 🗃 🧱 | * 🛛 🗖 📱 |
|---------|-------------------------|---------|
| ← | SIM cards | ۹ |
| | SIM slot 1 SIM empty | |
| 2 | SIM slot 2 Cell C | |
| | Preferred SIM for | |
| | Mobile data Cell C | |
| | Calls Cell C | |
| | SMS messages Cell C | |
| | | |
| | | |
| | | |
| | • | |

- GO TO SETTINGS
- SELECT NETWORK AND
 INTERNET
- SELECT SIM CARDS
- SELECT PREFFERED SIM
 CARD OPTION



RESET OPTIONS





BATTERY USAGE





VIEW FILES ON SD CARD





PRINTING FROM THE WEB



- GO TO PREFFERED
 WEBSITE
- SELECT THE 3 DOT MENU ON THE RIGHT TOP CORNER
- SELECT SHARE
- SELECT PRINT

Share via



12.

Gmail

 \sim



*



Nearby Share

Bluetooth

Android Beam





HOW TO SET UP AN EMAIL

